



STB111 INSTALLATION INSTRUCTIONS

Tools required:

- Ratchet
- 13mm socket
- 15 mm socket

Instructions:

1. Using a **13mm** socket, remove all **6** strut tower bolts as shown in **IMAGE 1 & 2**.
2. Install the strut tower brace using supplied hardware and a **13mm socket** shown in **IMAGE 3 & 4**.
3. Insert the through bolts and tighten using the supplied hardware and a **15mm socket** shown in **IMAGE 3 & 4**.
4. Tighten the 13mm nuts (strut mount) to **27 ft/lbs** and 15mm nuts (through bolts) to **40 ft/lbs**.

(Note: The upper strut mount studs have play that allow them to pivot slightly, this will not impact the vehicles alignment. If you are having trouble installing the strut tower brace, you can pivot and move the shock studs to align with the strut tower brace.)



IMAGE 1



IMAGE 2



IMAGE 3

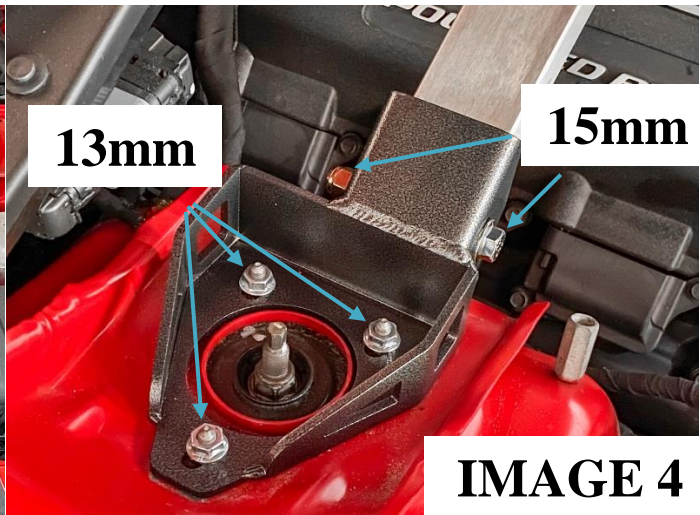


IMAGE 4

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to vehicle/person during installation or use of this product.